

INSTALLATION INSTRUCTIONS




Step 1




Step 2



Or Applies to model N300 ONLY.

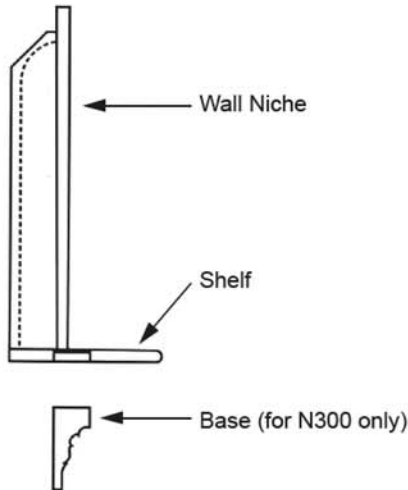

***Locate The Stud**

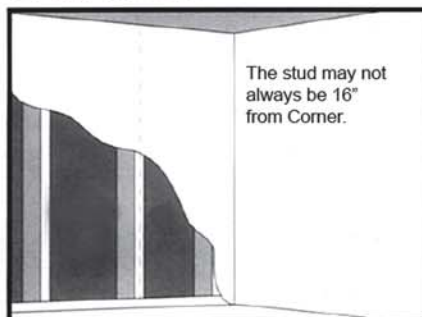

Step 1

Cut out paper template and position it over desired wall location. Make sure bottom edge is level. Use stud finder* to ensure position falls between studs. Mark around template, then cut on line with a utility knife or drywall saw (see Figure 1). (Suggested height of 40" from shelf of unit to floor).

Step 2

Apply PL Premium™ adhesive to back, then push niche against wall pressing firmly.

Step 3 (Applies to model N300 ONLY)

Remove D-Tape from back of base ornament and position centered directly beneath shelf (see Figure 3). Once centered, press base ornament firmly against wall to set tape.

Step 4

Seal around niche, shelf and base with a paintable caulk.

Step 5

Finish with a quality latex paint.

NOTE:

Use stud finder to ensure unit fits between studs. Electrical wiring or piping can if necessary be re-routed around the back sides of niche.